

ADCRAFT®



BW-450

Bun Warmer

This manual contains important information regarding your *Admiral Craft* unit. Please read the manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty. PLEASE READ!!!

WARNINGS

- Do not touch any hot surfaces
- Plug only into a 3-hole grounded electrical outlet
- Do not immerse unit, cord or plug in liquid at any time
- Unplug cord from outlet when not in use and before cleaning
- Do not operate unattended
- Do not use this unit for anything other than intended use
- Do not use outdoors
- Always use on a firm, dry and level surface at least 12” from walls or any other obstruction
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Keep children and animals away from unit
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals only
- Ensure that the designated power supply is adequate for continual usage and the voltage is correct

TO USE



1. Plug unit into a properly grounded outlet.
2. Using the power switch, turn the unit on. The light indicator located next to the power switch will illuminate to indicate that the power is on.
3. Set to the “HI” setting to preheat.
4. Once the warmer is heated, set the thermostat to desired preference.
5. Keep the drawer as full as possible. When adding fresh buns, be sure to move the heated buns to the front and add the fresh buns to the back so they are given time to heat.
6. For best results, do not reheat buns more than once. Reheating will compromise the quality of the buns. If the buns dry out, reduce the temperature.
7. Always unplug the unit from the electrical outlet when not in use.

CLEANING – NOTE: To maintain cleanliness and increase service life, the oven should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the electrical compartment it may cause a short circuit or electrical shock

- Disconnect the power cord from the electrical outlet.
- Allow unit to cool down.
- Remove any remaining buns.
- Remove the interior pan
- Grasp the drawer assembly and lift the drawer in an upward position while slowly pulling out until the draw disengages with the stopper.
- Clean with a damp cloth using a mild detergent.
- Do not clean with a water jet stream.
- To avoid damage, do not use abrasive cleaners or scouring pads.
- If soap or chemical cleaners are used, be sure they are completely rinsed away with clear water immediately after cleaning. Chemical residue could damage or corrode the surfaces of the unit.


Bun Warmer BW-450W Circuit diagram

0.45kW/120V/50-60Hz

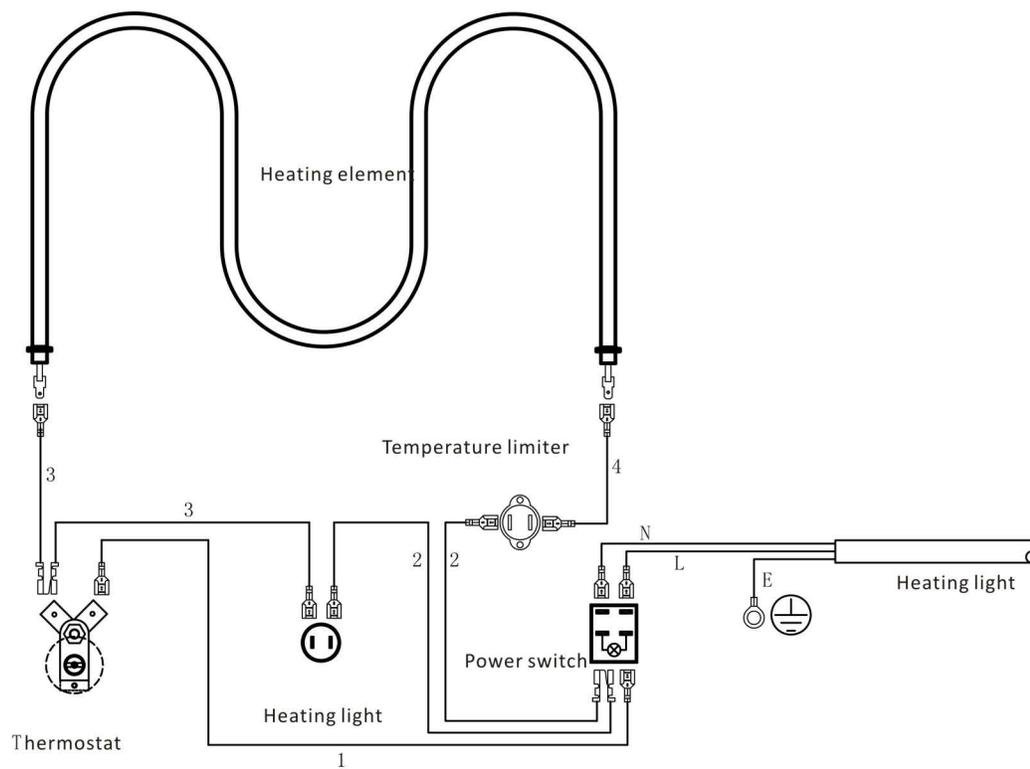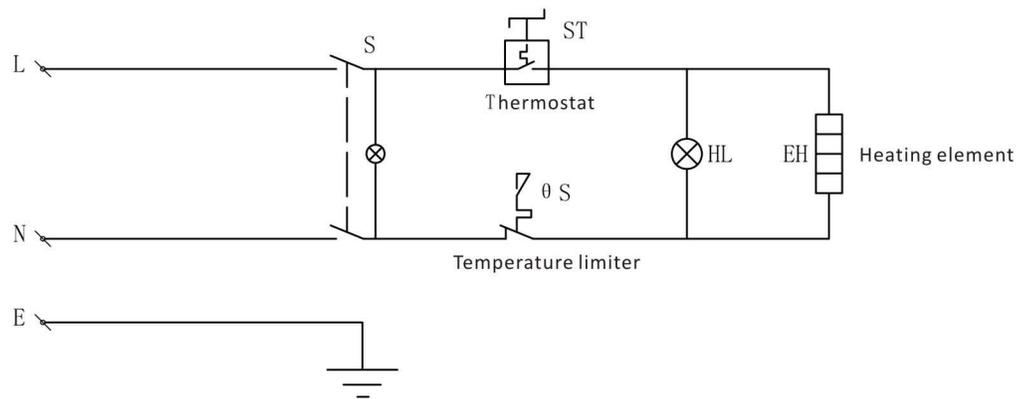

BW-450

Parts Diagram

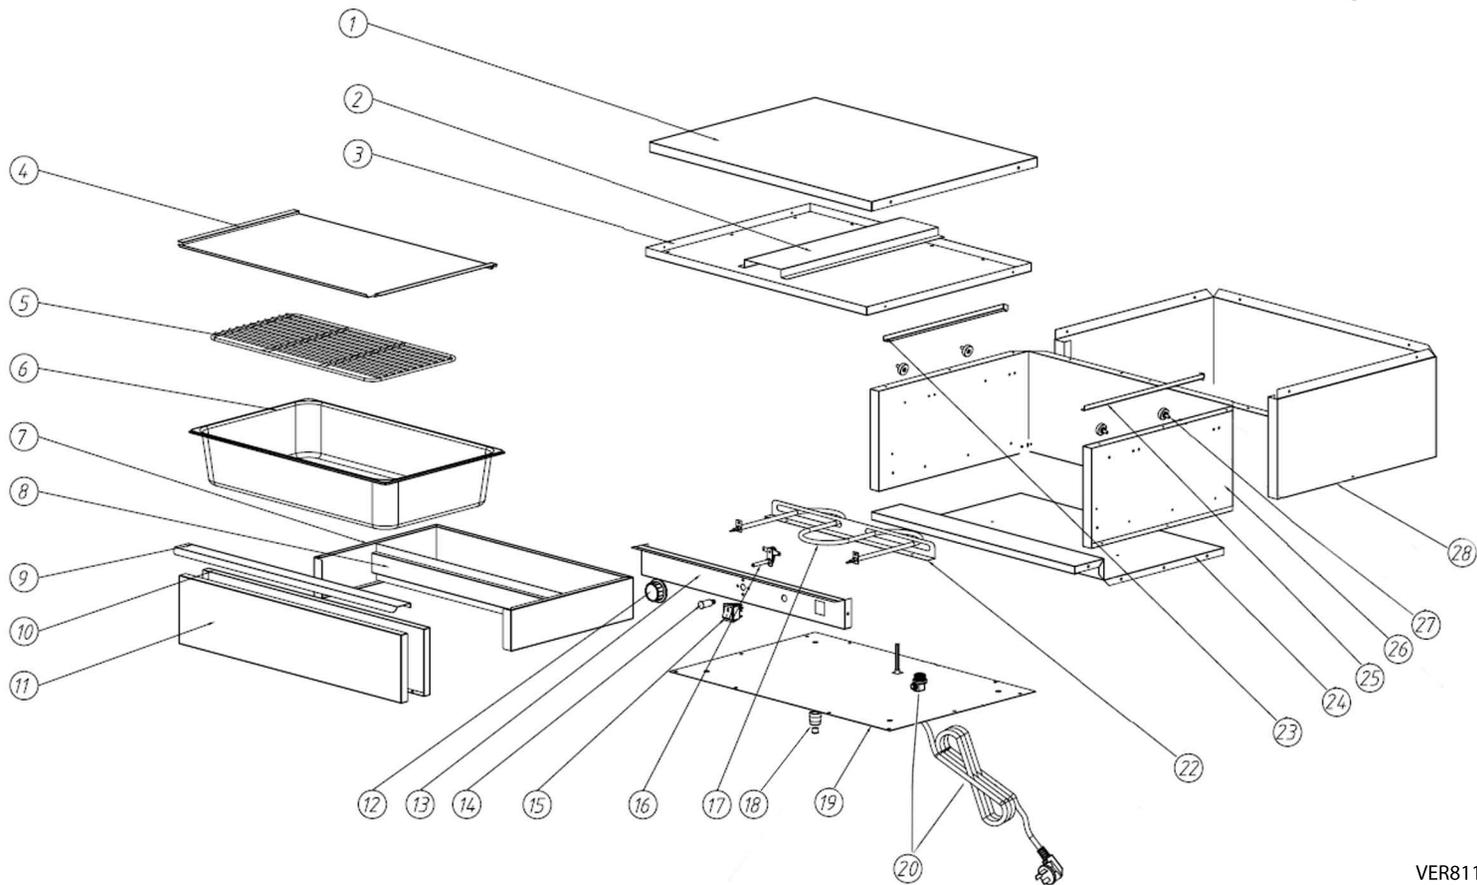

Bun Warmer - BW-450

Reference Number	Part Number	Description
1	-	Chamber Cover
2	-	Chamber Support
3	-	Chamber Base
4	-	Tray Cover
5	BW-5	Wire Rack
6	BW-6	Full Size Food Pan
7	-	Tray Support Frame
8	-	Tray Support
9	-	Handle
10	-	Inner Tray Plate
11	-	Outer Tray Plate
12	BW-12	Knob
13	-	Control Panel
14	BW-14	Indicator Light
15	BW-15	Switch
16	BW-16	Thermostat
17	BW-17	Heating Element - 120V/450W
18	BW-18	Bakelite Foot with Rubber Insert and Screw
19	-	Bottom Plate
20	BW-20	Power Cord & Strain Relief
22	-	Heating Element Support
23	-	Left Slide Plate for Tray Cover
24	-	Bottom Tray Plate Cover
25	-	Right Slide Plate for Tray Cover
26	-	Chamber Boarding
27	-	Screw/Bearing
28	-	Body Shell

VER811

ACE Electrical Equipment One Year Warranty

ACE warrants its equipment against defects in materials and workmanship, subject to the following conditions: This warranty applies to the original owner only, and is not assignable.

ACE Electrical Equipment is warranted for one year, effective from the date of purchase by the original owner. A copy of the original receipt or other proof of purchase is required to obtain warranty coverage.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at ACE's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by ACE, after defective unit has been inspected and defect has been confirmed. ACE does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts where usage, wear, or lack of preventative maintenance may create abnormal replacement rates, and these parts are excluded from this limited warranty.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary. Contact ACE for details at 1-800-223-7750

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage for improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from ACE, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only. Warranty is void if equipment is used in other than a commercial application.

In the event your repair is not covered under the stated warranty provisions, parts are available by calling 1-800-223-7750. Equipment not covered by repair should be picked up from our warehouse facility within 10 business days from notification date. Any and all arrangements and expenses for the return of this merchandise is your responsibility.

“THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN.”

VER811